 
 
 
 
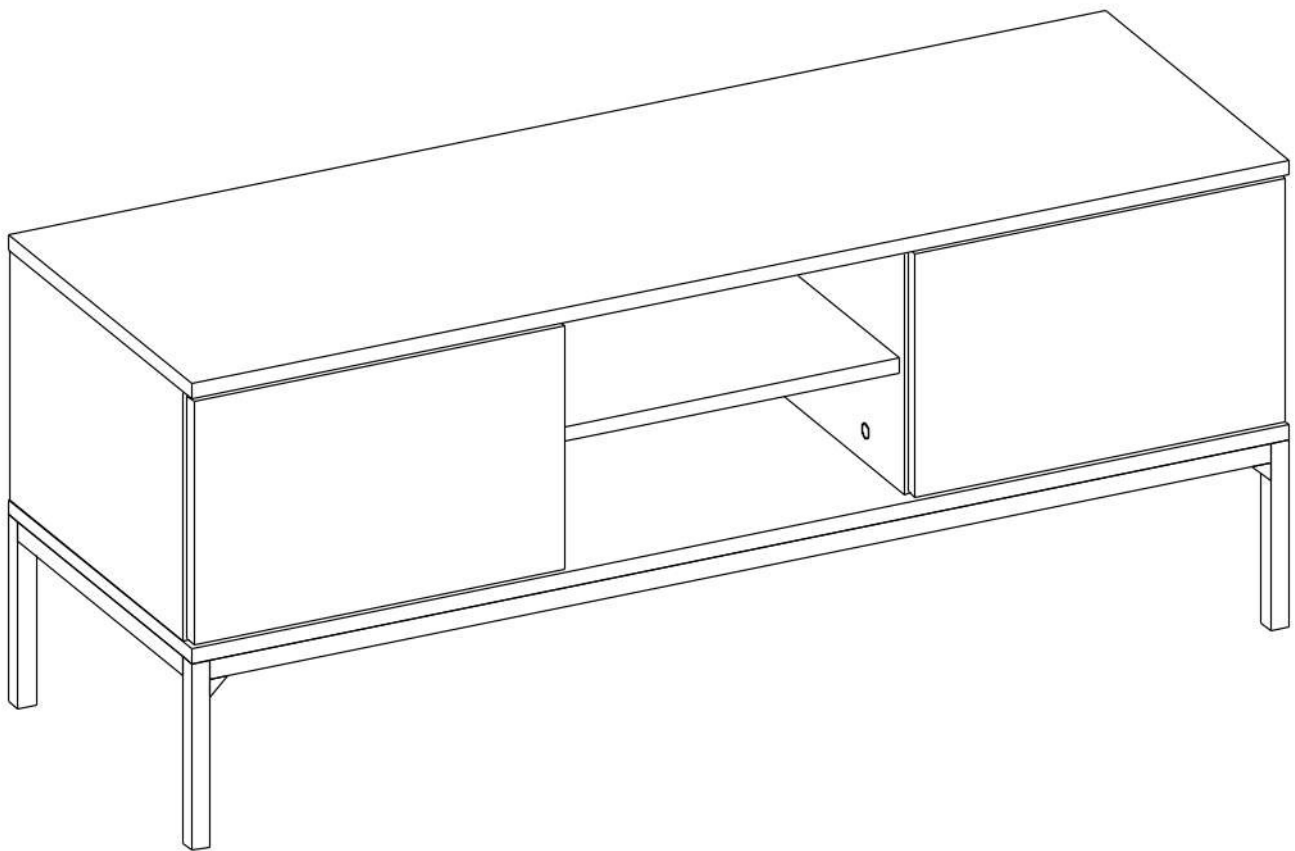 
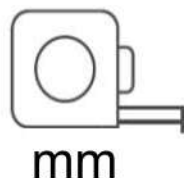 


LANZZI RTV 120









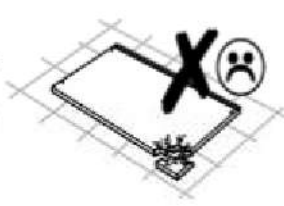


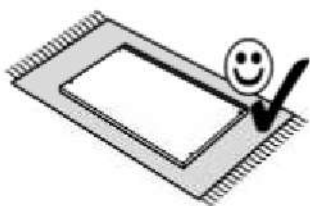





NR	il	Dł [mm]	Sz [mm]	Gr [mm]
1	1	1200	400	16
2	1	1200	400	16
3	1	380	268	16
4	1	380	268	16
5	1	380	268	16
6	1	380	268	16
7	1	370	378	16
8	2	260	405	16
9	1	1194	294	3

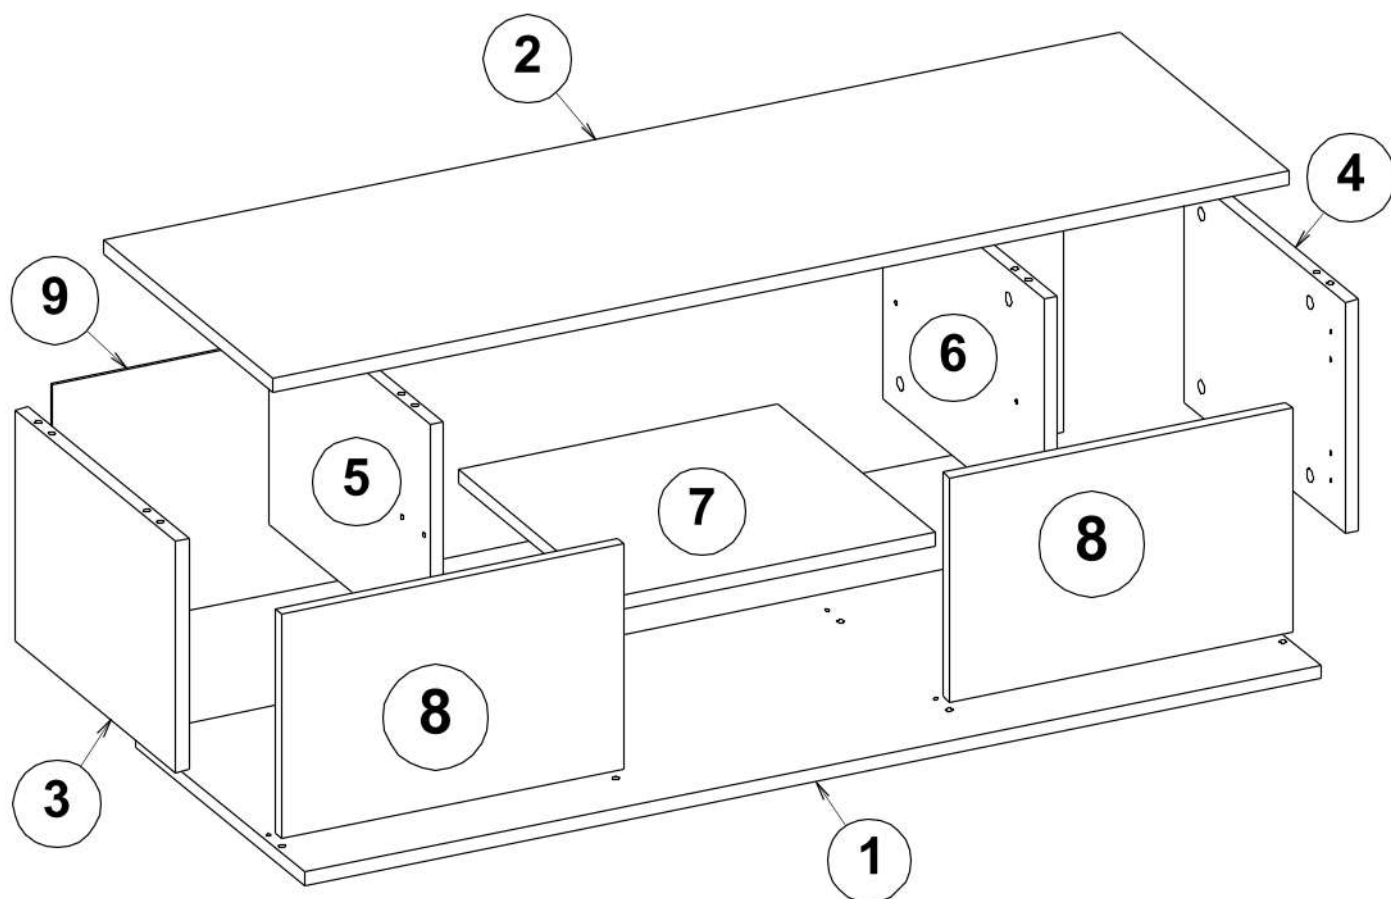

       
 
 
Assembling instruction / Montageanleitung / Notice de montage /
 Montaje de instrucció / Instrukcja montaży / Сборка инструкция /
 Montáž instrukce / Montáž inštrukcie / Szerelési utasítás /
 Сглобяване инструкция / Kurulum Talimatları / Montagem de instrução /
 Sestavljanje navodila / Montage instructie / Склапање инструкцију /
 Asamblarea de instrucțiuni / Sastavljanje upute / Monterings instruktion /
 Istruzioni di montaggio / Збірка інструкція / Montāžas instrukcija /
 Montavimo instrukcija / Paigaldusjuhend / Kokoamisohjeisiin

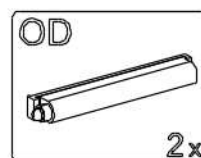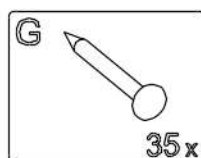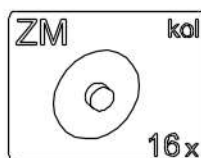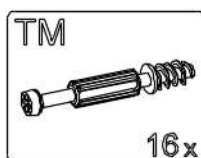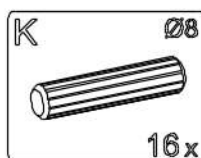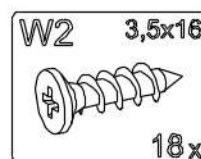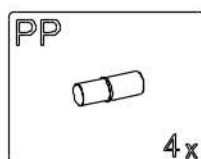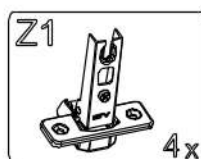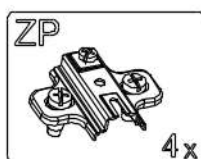



1

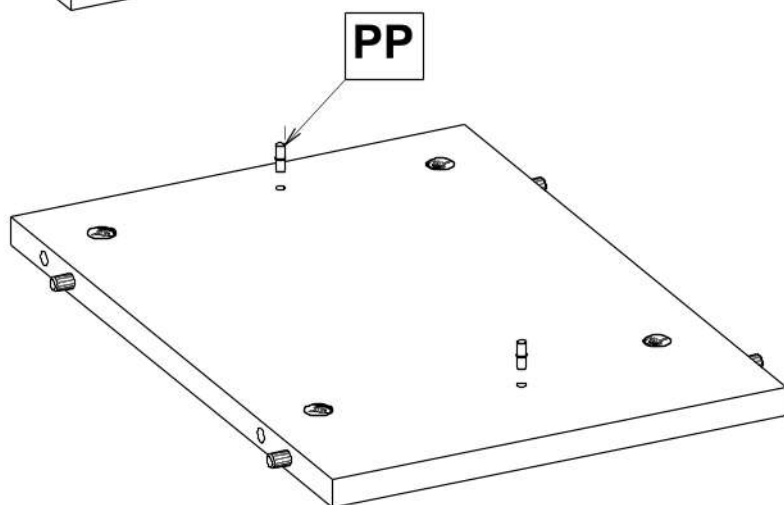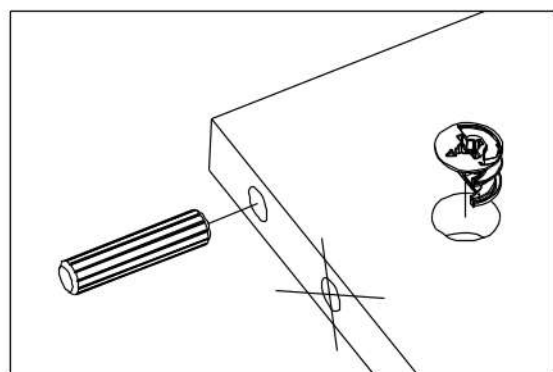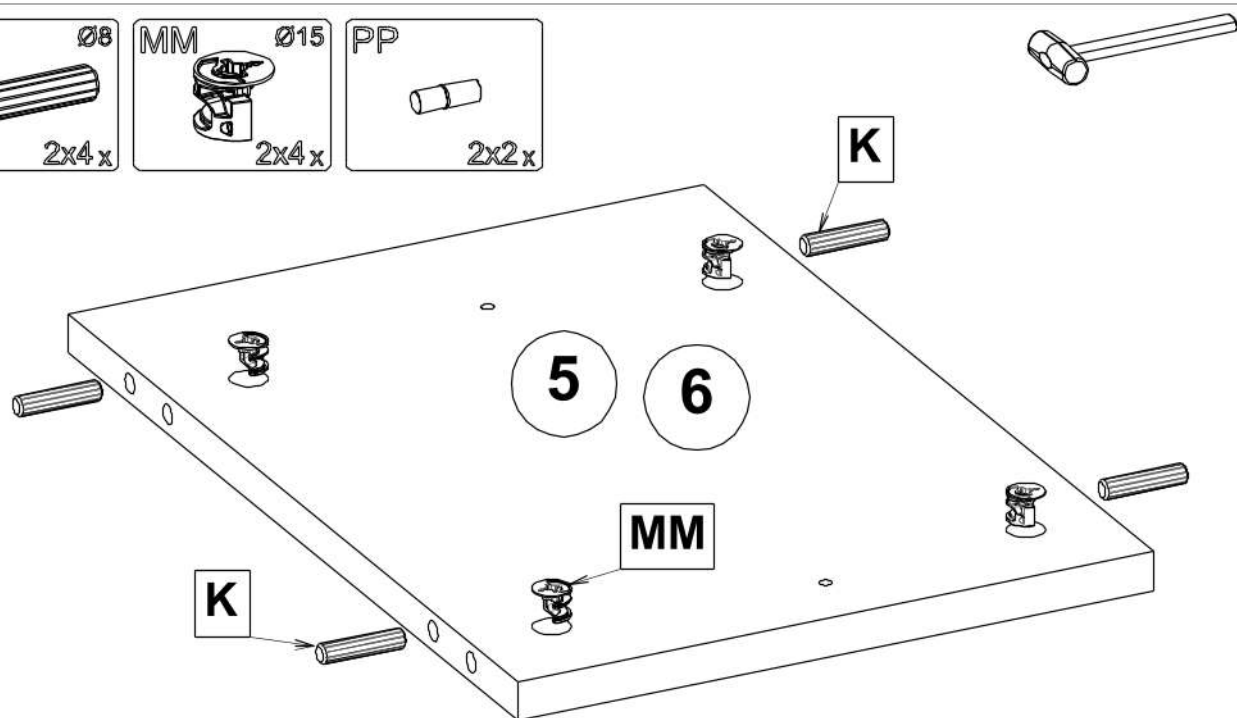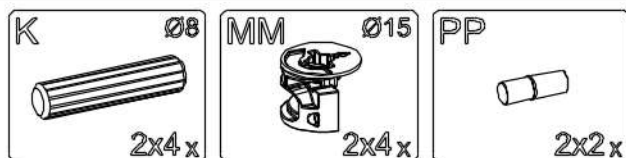    




2

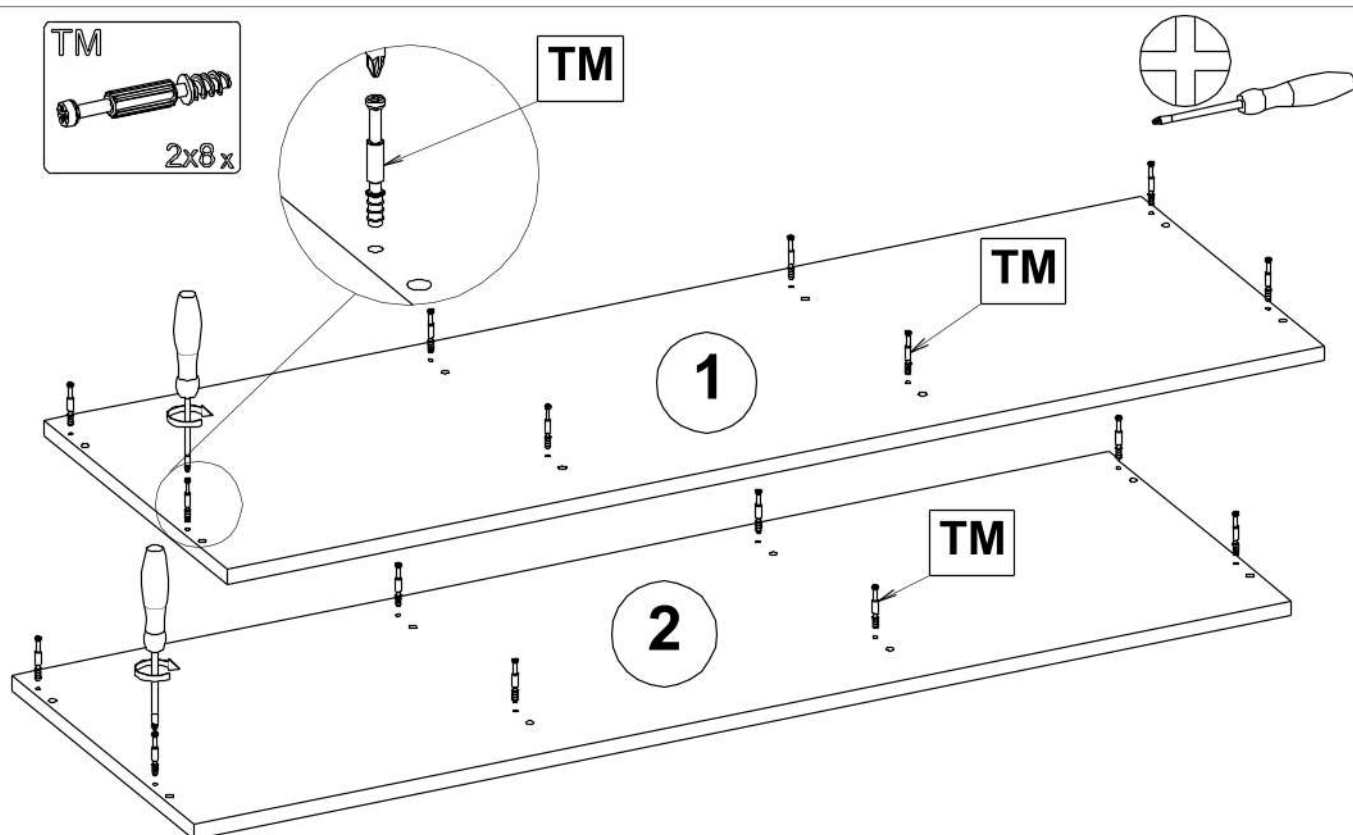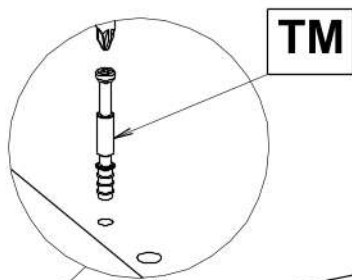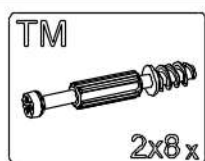   


3

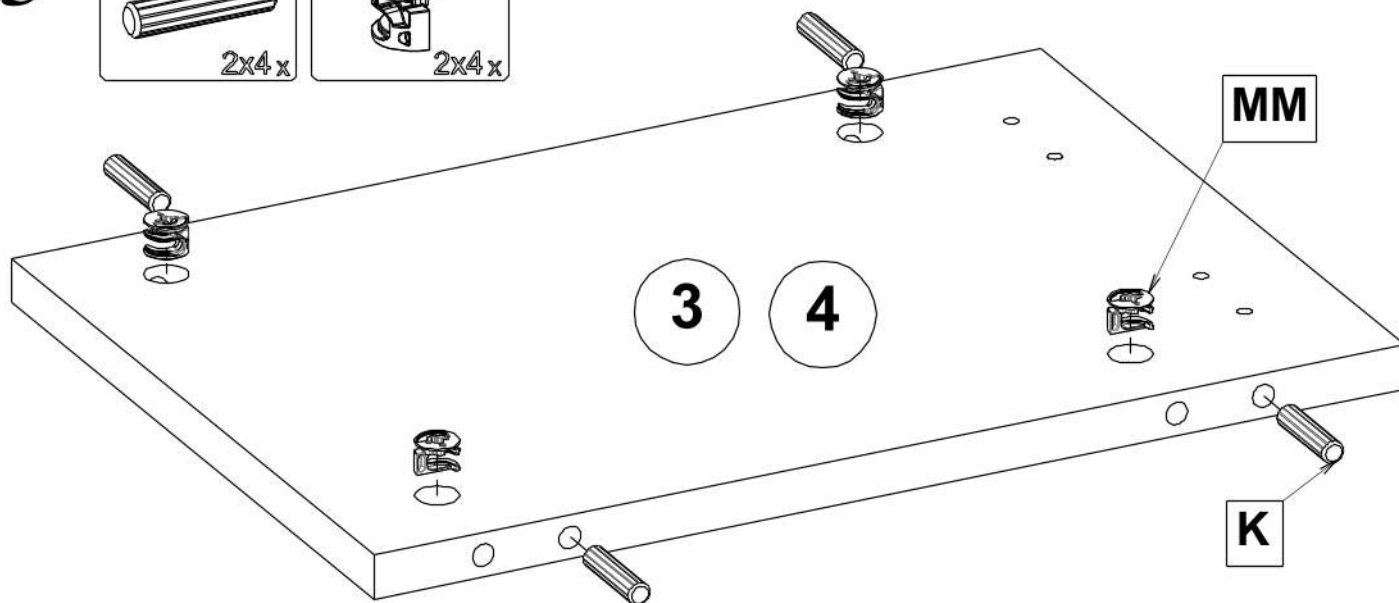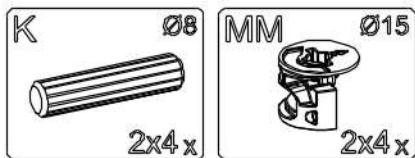  


4

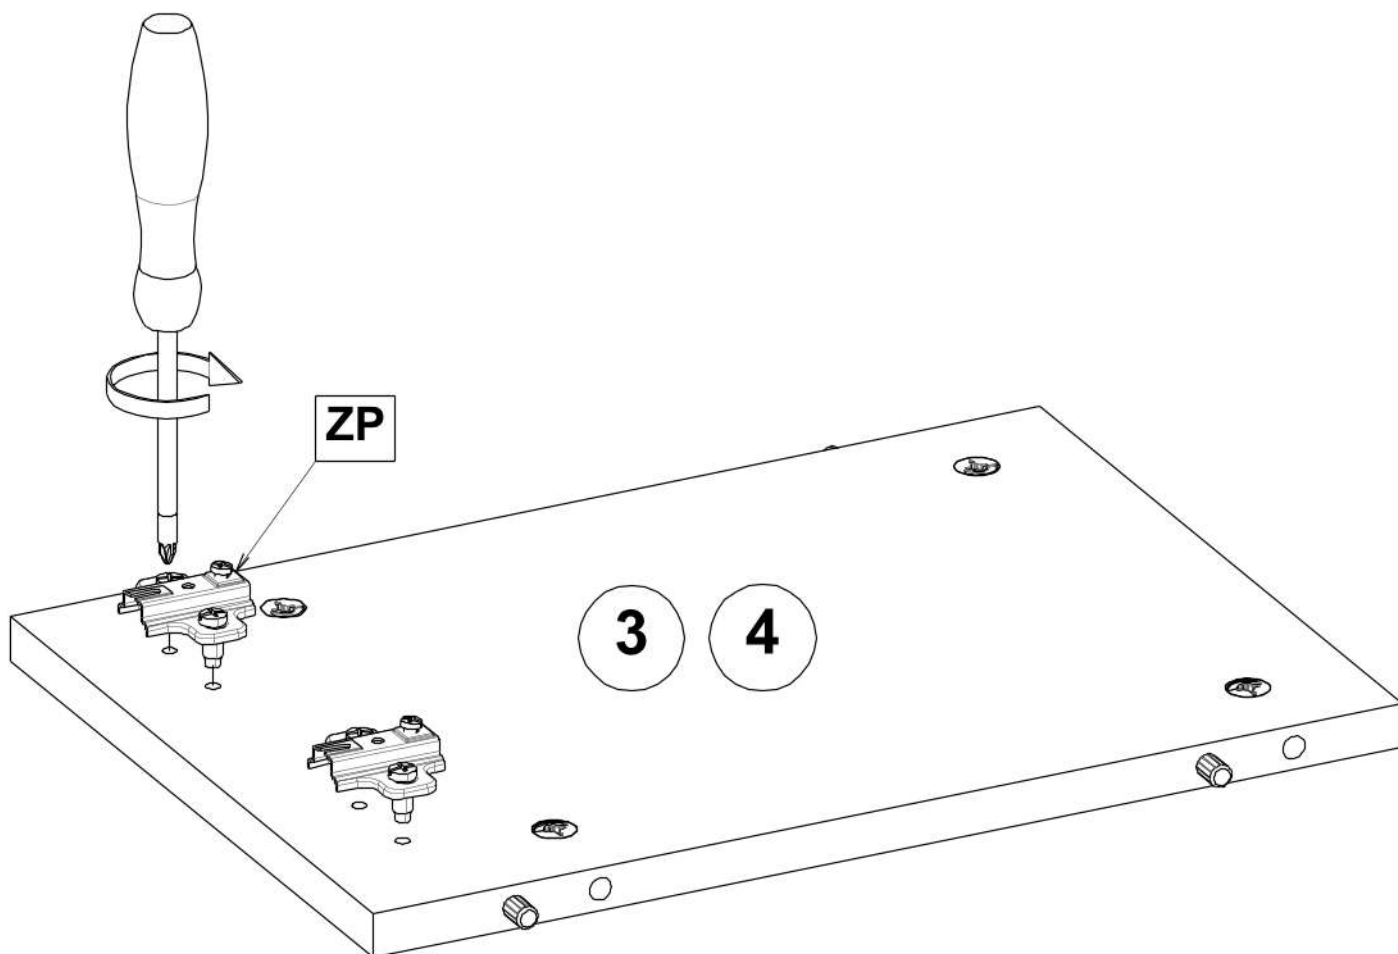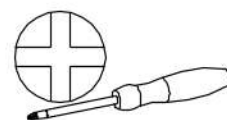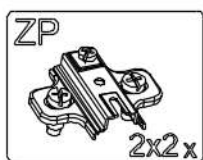   


5

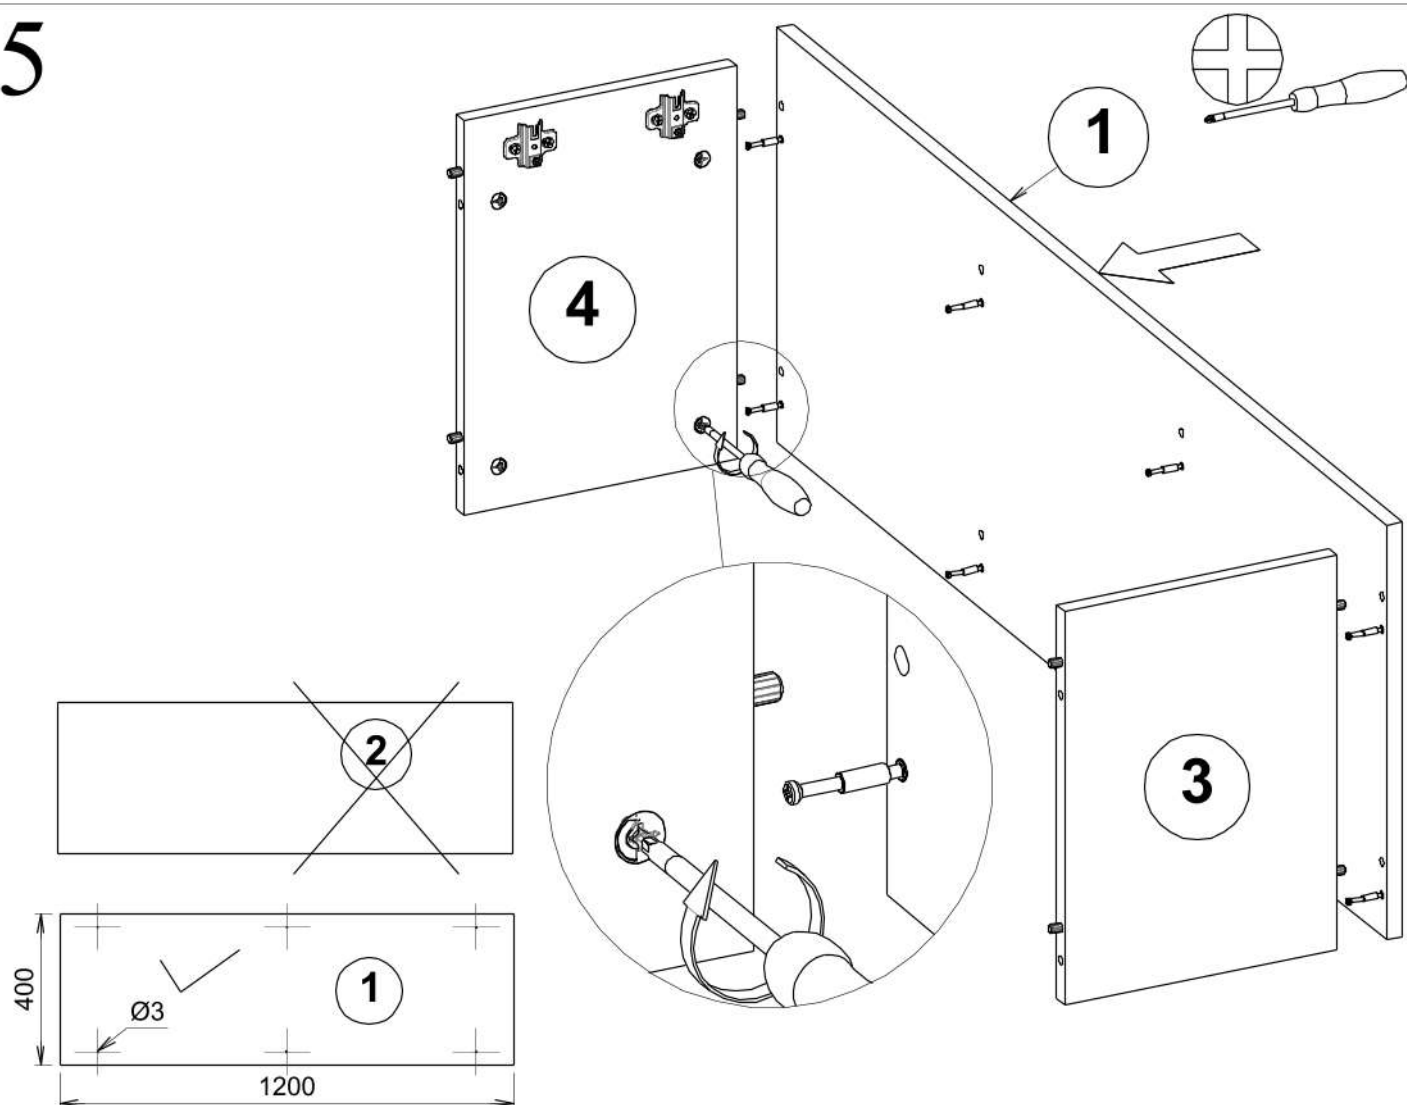 




6

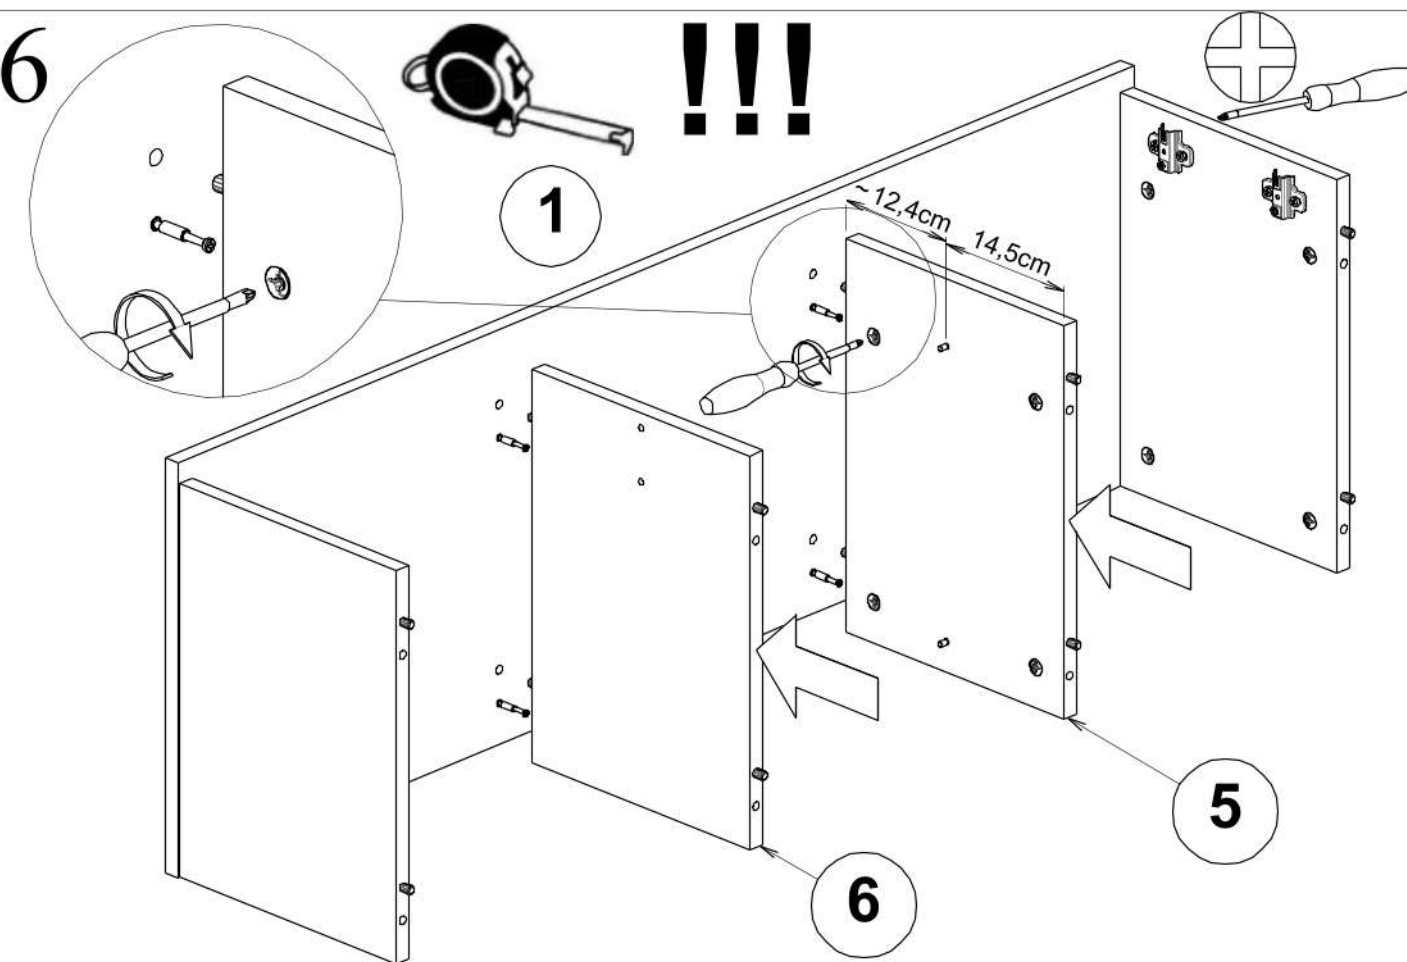 






7

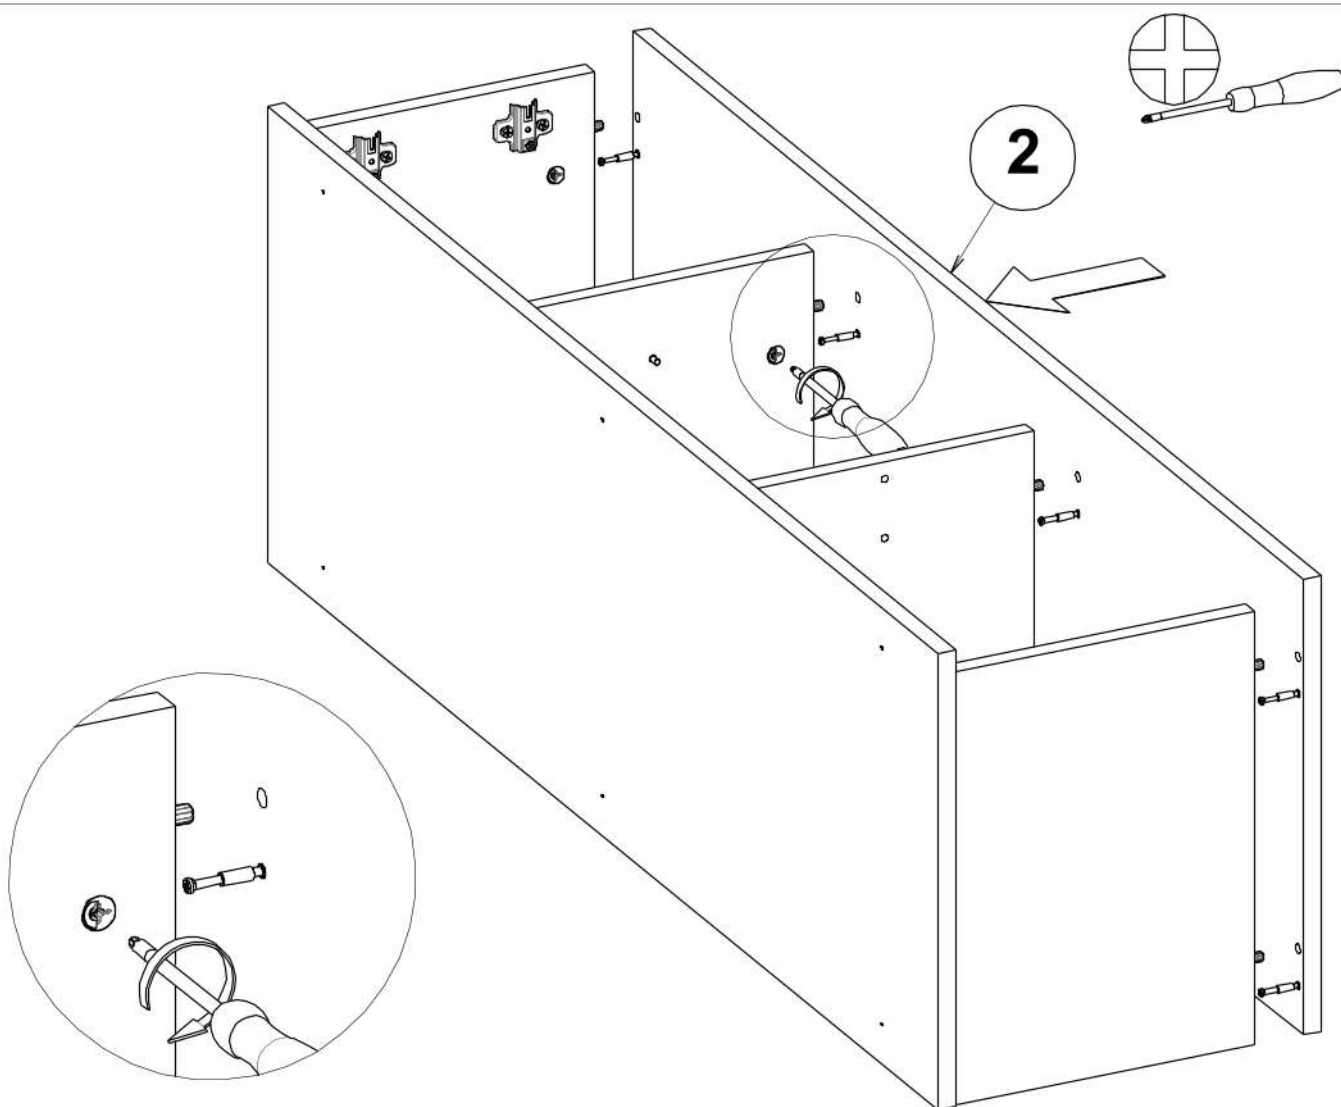 



8

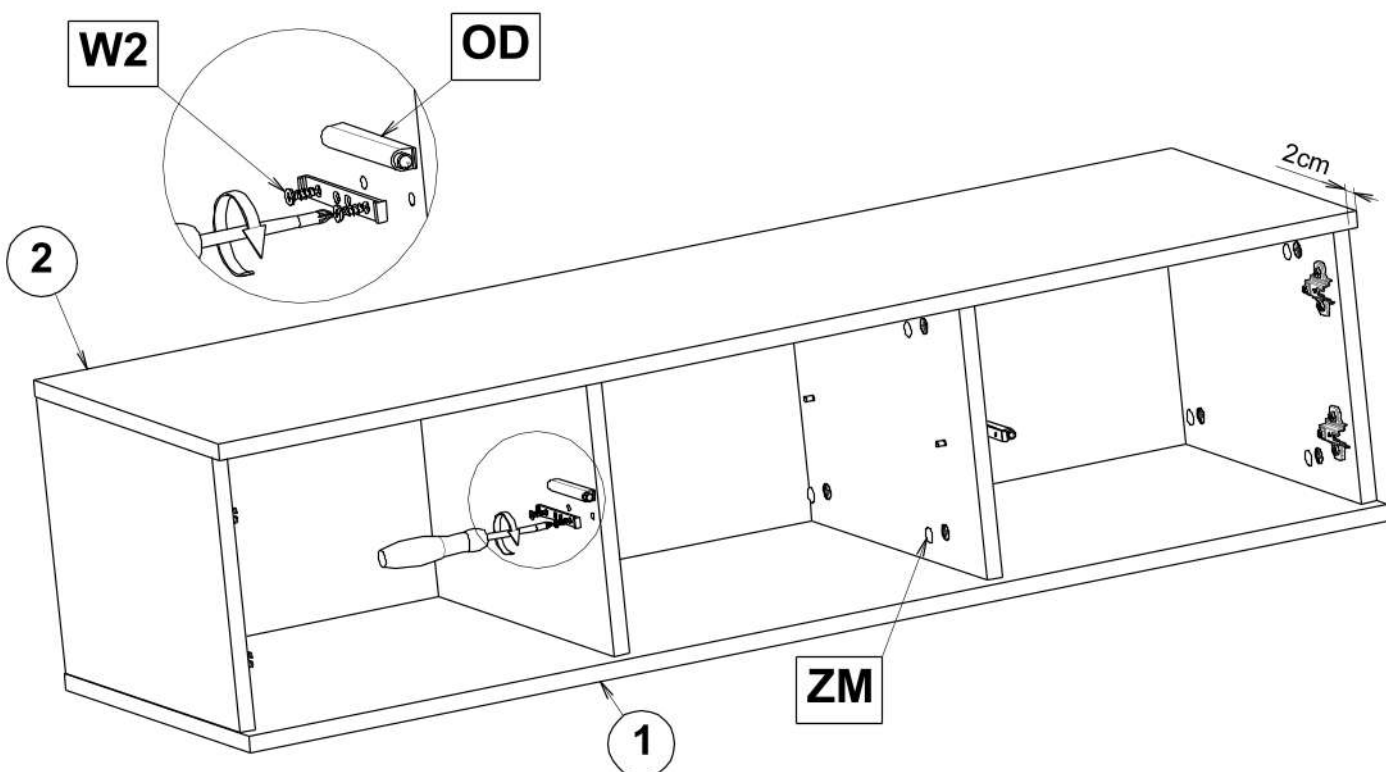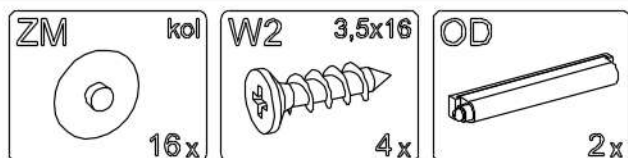   


9

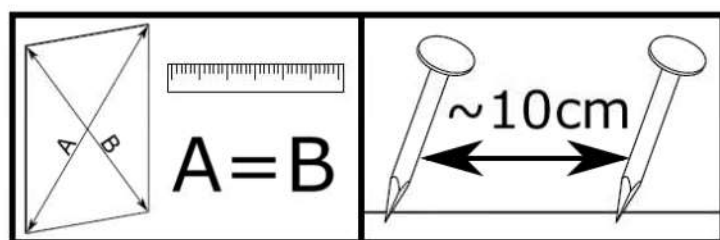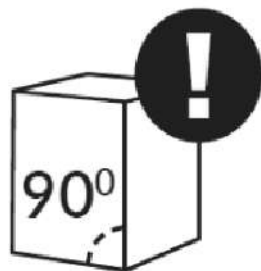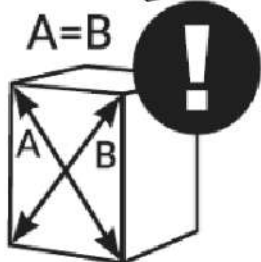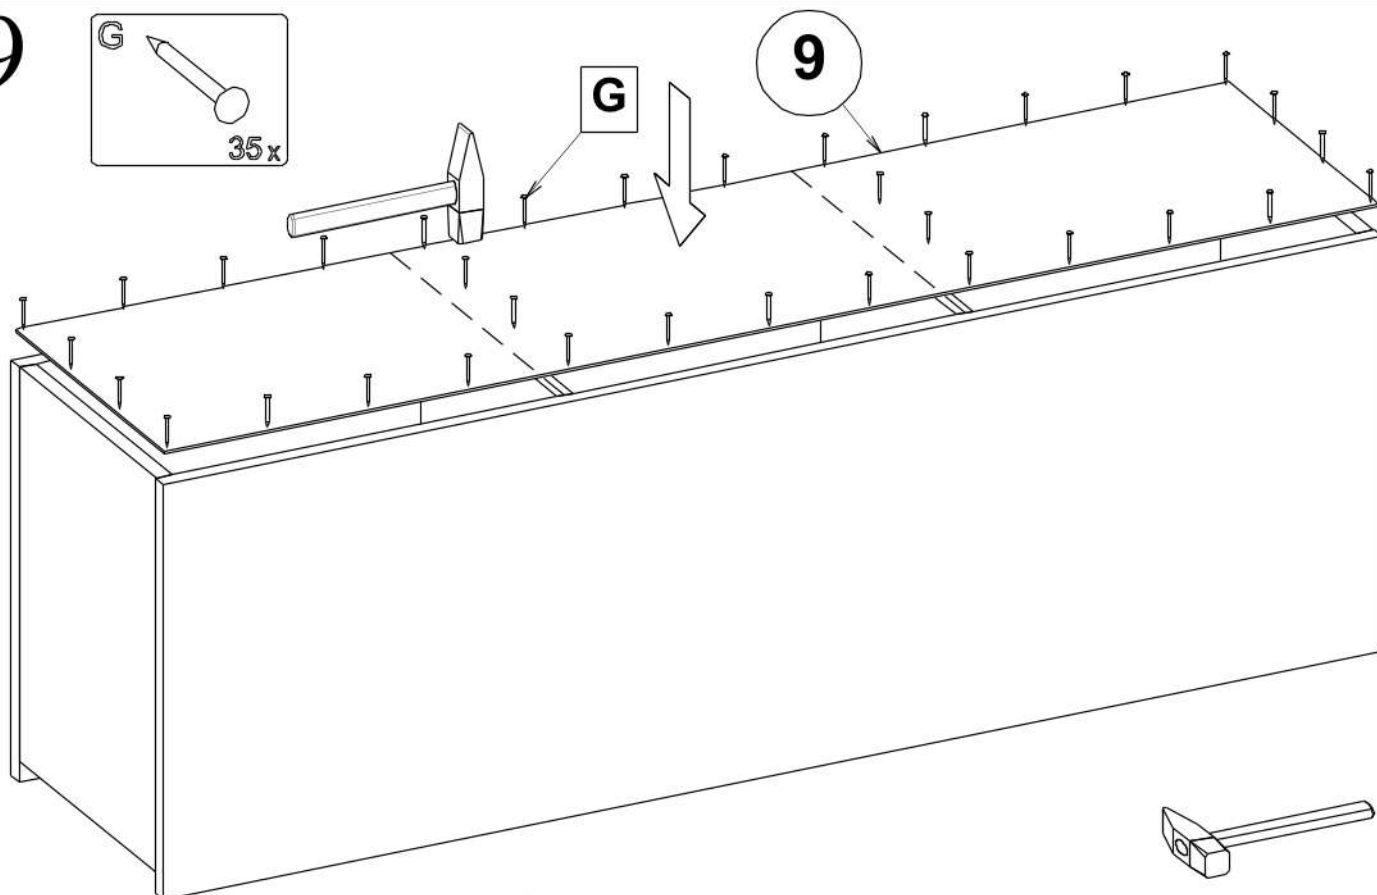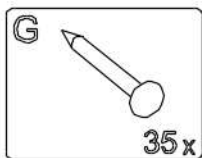     




10

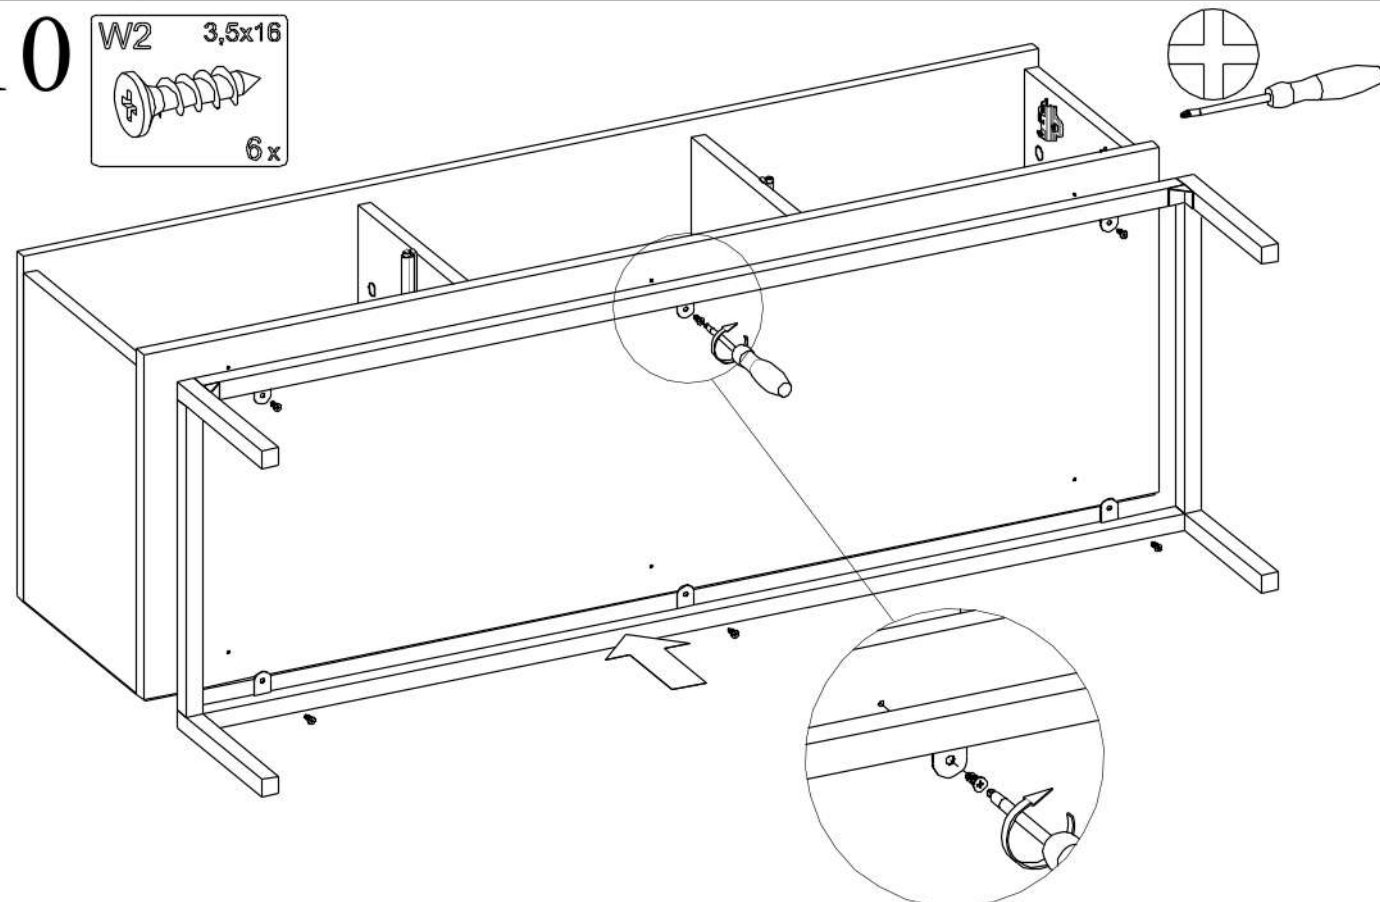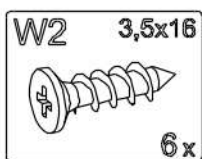  


11

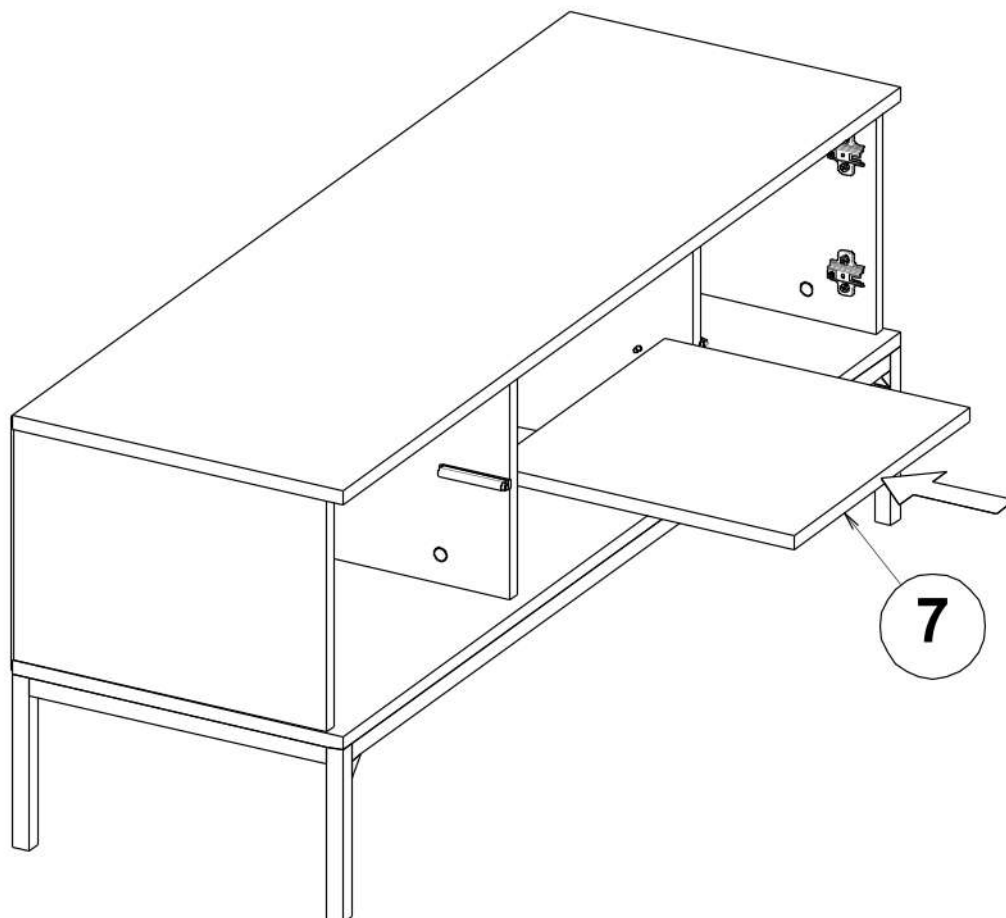 

12

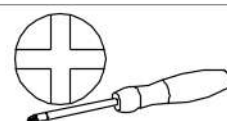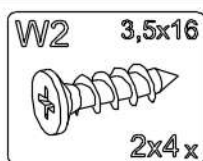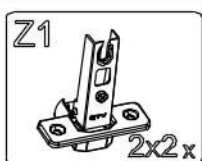   

Z1

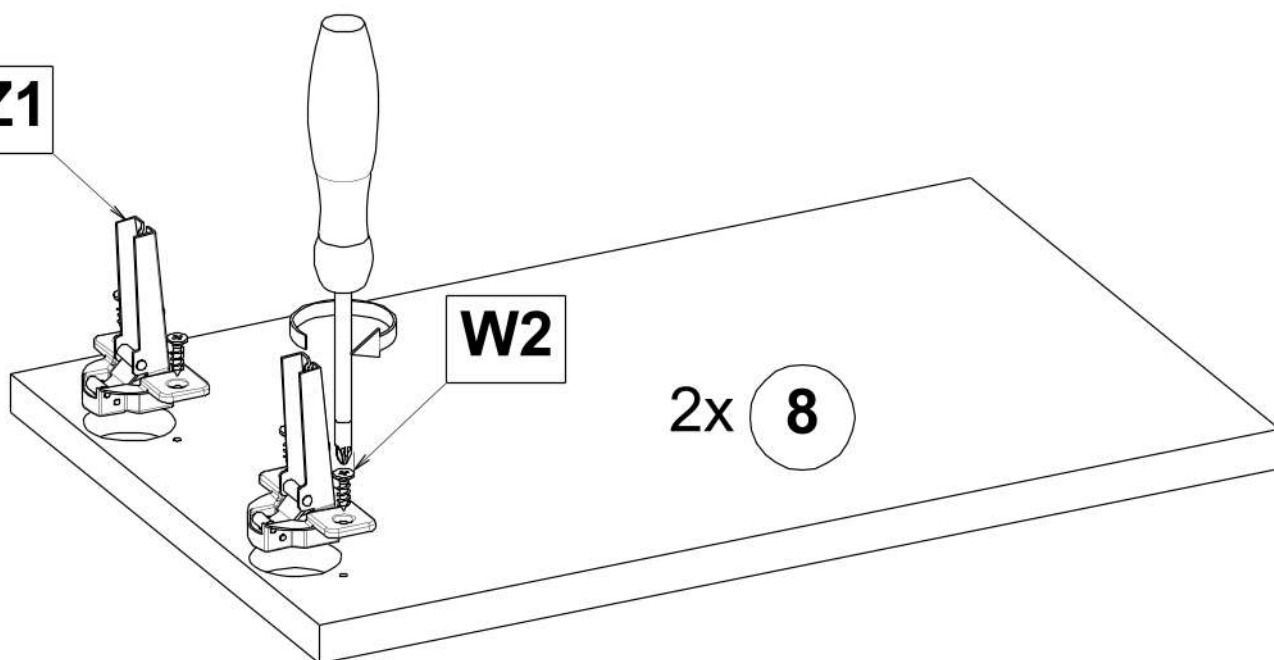 

13

